



MILBOX-AGX

USER MANUAL

UM-MBXAGX-01

Revision 1.2

01/10/2024



Forecr
<https://www.forecr.io>
support@forecr.io

Table of Contents

Preface	3
Disclaimer.....	3
Customer Support	3
Contact Information	3
Copyright Notice.....	3
Trademark Acknowledgment.....	3
Limited Product Warranty.....	4
Revision History	4
1. Introduction	5
2. Product Specification	5
2.1 Technical Specification	5
2.2 Block Diagram	6
2.3 MILBOX-AGX Visuals	6
3. Hardware Information	7
3.1 Connector Location	7
3.2 List of Connector	7
3.3 The Definition of Each Connector	8
3.3.1 Power Connector (X1)	8
3.3.2 High-Speed Connector (X2)	9
3.3.3 USB 3.0 Connector (X3)	10
3.3.4 Ethernet Connector (X4,X5,X6,X7)	10
3.3.5 Low-Speed Connector (X8)	11
4. Software Information	12
4.1 Installation	12
5. Mechanical Models & Drawings	12
5.1 3D Model.....	12
5.2 2D Mechanical Drawing	12
6. Power Consumption	13
7. Cables	13
8. MTBF Prediction	13
9. Ordering Information	13

Preface

Disclaimer

Forecr emphasizes that the information contained in this user manual is continuously updated in line with the technical modifications and enhancements made by Forecr to its MILBOX-AGX. Therefore, this manual only represents the technical status of Forecr MILBOX-AGX at the time of publishing.

Forecr shall not be held responsible for any damages that may occur directly or indirectly as a result of any technical or typographical errors or omissions found in this document or for any discrepancies between the product and the user's manual.

Customer Support

In case you encounter any challenges after reading the user manual and/or using the MILBOX-AGX, please reach out to the Forecr reseller from which you purchased the MILBOX-AGX.

See the contact information section below for more information on how to contact us directly.

Contact Information

E-mail Address	For information requests: info@forecr.io For support requests: support@forecr.io For wholesale inquiries: sales@forecr.io
Address	Forecr OÜ Akadeemia tee 21/1 (II floor), Room 219, 12618, Tallinn, Estonia
Telephone Number	Estonia +372 5332 2632
Website	https://www.forecr.io

Copyright Notice

The information provided in this manual is subject to change without notice. Forecr shall not be held responsible for any errors contained herein or for any incidental or consequential damages that may arise from the provision, implementation, or utilization of this material. This manual is protected by copyright. All rights are reserved by Forecr. No part of this manual may be reproduced, copied, translated or transmitted in any form without the prior written consent of Forecr.

Copyright © 2023 - Forecr.io

Trademark Acknowledgment

Forecr recognizes and acknowledges that all trademarks, registered trademarks, and/or copyrights mentioned in this user manual belong to their respective owners. All possible trademarks or copyright acknowledgments that are not listed herein do not mean a lack of acknowledgment to the rightful owners of mentioned trademarks and copyrights. Forecr acknowledge the rights of the trademark owners and respect their intellectual property.

Limited Product Warranty

Forecr provides a 1-year Warranty for the MILBOX-AGX. This warranty period is valid from the original purchase date of the MILBOX-AGX. In order to maintain warranty, the MILBOX-AGX must not be altered or modified in any way. Changes or modifications to the MILBOX-AGX that are not explicitly approved by Forecr and described in this user manual or received from Forecr Support as a special handling instruction, will void your warranty.

To receive warranty service, the MILBOX-AGX must be delivered to Forecr within the warranty period together with the original invoice or proof of purchase.

Revision History

Revision No	Revision Date	Revision Description
rev 1.0	07.03.2024	Preliminary Release
rev 1.1	17.07.2024	JetPack 6.x has been added to the 2.1 Technical Specification Section and the 4.1 Installation Section.
rev 1.2	01.10.2024	Power supply range in the Section 2.1 has been changed. Voltage range has been added to the Section 3.3.1.

1. Introduction

Introducing our latest military grade ruggedized computer, powered by the cutting-edge AGX Orin SoM technology. This compact and powerful device is designed to withstand the toughest environments, making it the perfect solution for military, industrial, and other demanding applications.

With 4x Gigabit Ethernet ports, USB3.2, HDMI, 2x CAN, 4x RS- 232, and 4x RS-422, this ruggedized computer offers unparalleled connectivity options. Plus, with M.2 SSD support, you'll have lightningfast storage performance, ensuring your critical data is always available when you need it.

Our ruggedized computer is built to last, with a ruggedized chassis that can withstand extreme temperatures, shocks, and vibrations. You can rely on this device to operate reliably in the most challenging environments. Whether you're in the military, working in industrial settings, or need a reliable computing solution for outdoor applications, our ruggedized computer is the ideal choice. With its powerful performance, rugged design, and extensive connectivity options, this device is sure to exceed your expectations.


Latest revision of this user manual, datasheet, and 3D model can be downloaded from [Forecr Web Page](#).

2. Product Specification

2.1 Technical Specification

Supported Modules	NVIDIA Jetson AGX Orin 32GB NVIDIA Jetson AGX Orin 64GB NVIDIA Jetson AGX Orin Industrial
Memory	32 GB 256-bit LPDDR5x 64 GB 256-bit LPDDR5x
Graphics Interfaces	1x HDMI
Interfaces	4x Gigabit Ethernet 1x USB 3.1 2x USB 2.0 1x USB 2.0 (Serial Console) 2x CAN Bus 4x RS232 4x RS422
Wireless Communication	None
Power Supply	12-36 VDC (28 VDC Nominal)
Extension Sockets	None
Mass Storage	64 GB eMMC 5.1 Flash 1x M.2 Key-M SSD Slot SD Card
Ambient Conditions	-25°C ... +85°C (-40°C for Industrial Module)
Form Factor / Dimensions	210 mm x 296 mm x 92 mm 4750 grams
Operating Systems	Ubuntu Linux 20.04
Standards	Designed to meet MIL-STD-1275/704, MIL-STD-810, MIL-STD-461, IP67
JetPack Support	JetPack 5.x JetPack 6.x

2.2 Block Diagram

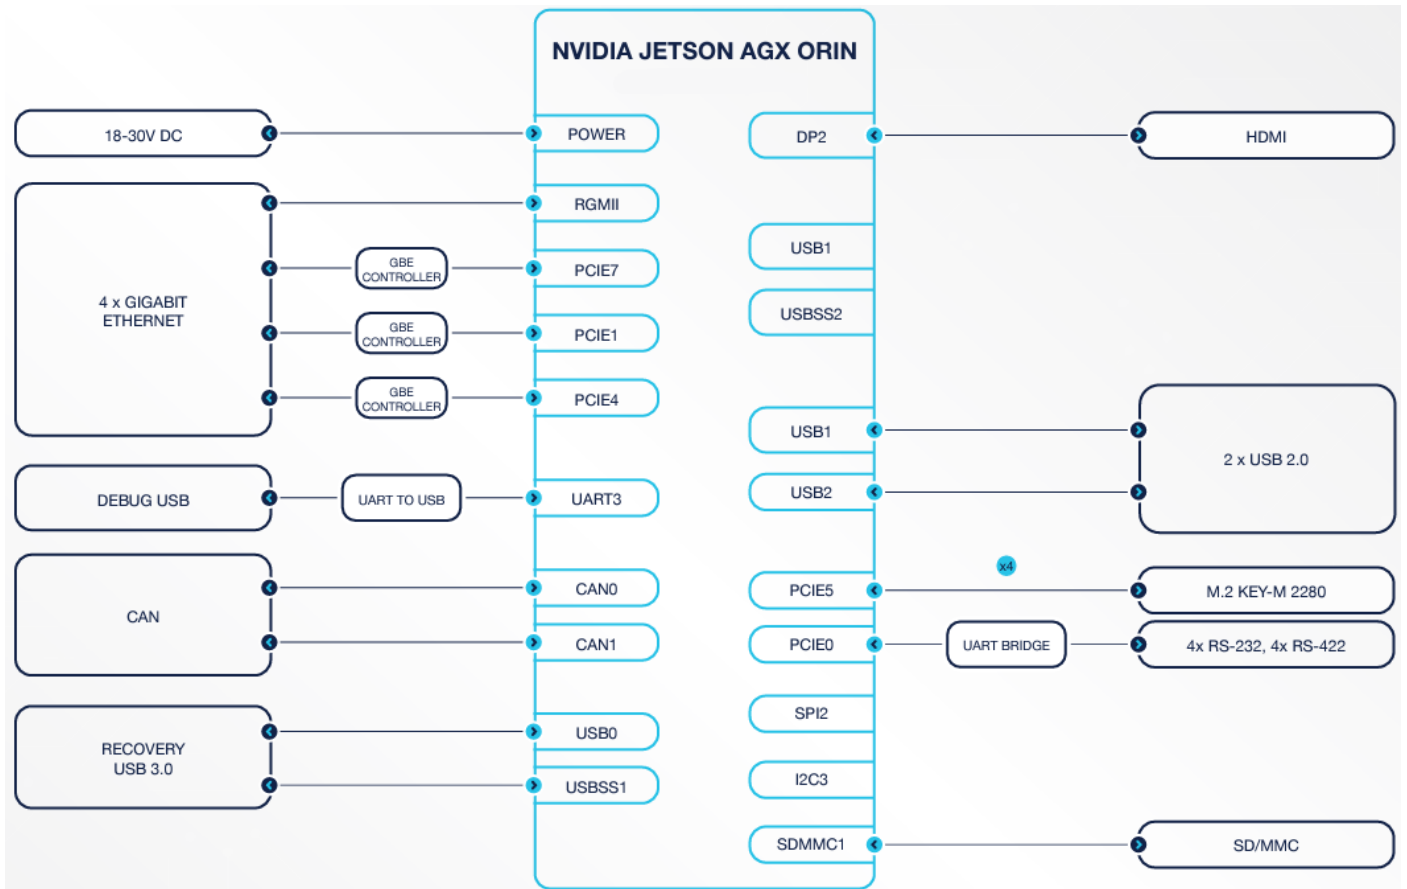


2.3 MILBOX-AGX Visuals



3. Hardware Information

3.1 Connector Location

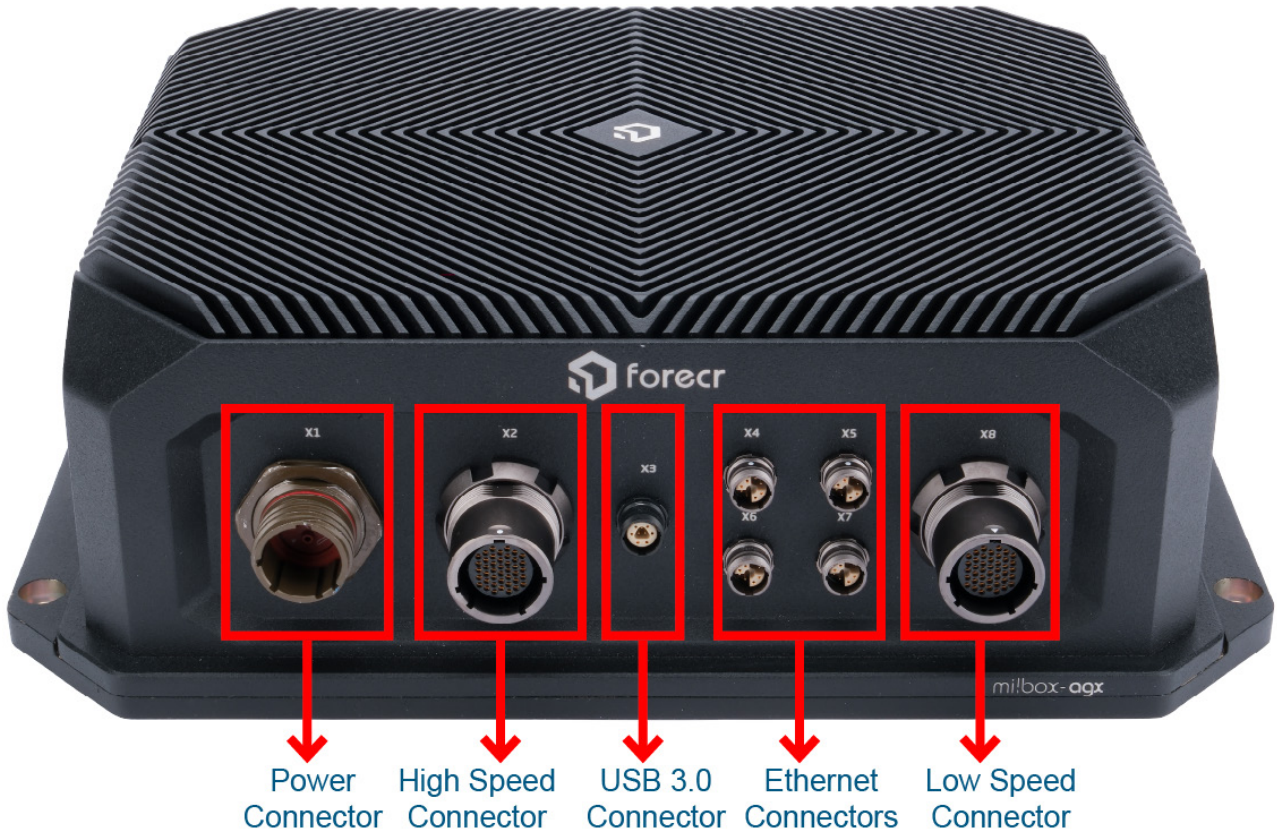


3.2 List of Connector

Connectors
MILBOX-AGX Power Connector
MILBOX-AGX HIGH-SPEED Connector
MILBOX-AGX USB 3.0 Connector
MILBOX-AGX Ethernet Connectors
MILBOX-AGX LOW-SPEED Connector

3.3 The Definition of Each Connector


3.3.1 Power Connector (X1)

	Function		Description		
	Mating Connector		D38999/26WC4SN		
	Voltage Range		12-36 VDC (28 VDC Nominal)		
	End Connector Type		Open Wire		
	Cable Length		100 cm		
	X1-Pinout		Pin	Description	
			A	VIN	
		B	VIN		
		C	GND		
		D	GND		


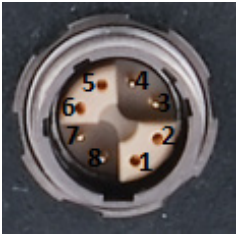
3.3.2 High-Speed Connector (X2)

	Function		Description		
	Mating Connector		UP01L18 M042C BK1 Z1ZB		
	End Connector Type		HDMI Female / USB Type-A Female /Open Wire		
	Cable Length		50cm		
	X2-Pinout	Pin	Description	Pin	Description
		1*	TMDS DATA 1+	22	GND (NO WIRE)
		2*	TMDS DATA 1-	23	GND (NO WIRE)
		3	TMDS DATA 1 SHIELD	24	GND (NO WIRE)
		4*	TMDS CLOCK+	25	GND (NO WIRE)
		5*	TMDS CLOCK-	26	GROUND
		6*	TMDS DATA 0+	27	RECOVERY
		7*	TMDS DATA 0-	28	RESET
		8	TMDS DATA 0 SHIELD	29	USB0 GROUND
		9	TMDS CLOCK SHIELD	30	USB0 +5V POWER
		10*	TMDS DATA 2+	31	ID
		11*	TMDS DATA 2-	32	USB2 +5V POWER
		12	HDMI +5V POWER	33	USB2 GROUND
		13	HDMI GROUND	34*	USB0 D+
		14	HOT PLUG DETECT	35*	USB0 D-
		15	DDC CLOCK	36	USB1 GROUND
		16	DDC DATA	37	USB1 +5V POWER
17		CEC	38*	USB2 D-	
18		TMDS DATA 2 SHIELD	39*	USB2 D+	
19		GND (NO WIRE)	40	GND (NO WIRE)	
20	GND (NO WIRE)	41*	USB1 D+		
21	GND (NO WIRE)	42*	USB1 D-		
<p>Note: Pins with * mark in Pin section are differential signals.</p>					

3.3.3 USB 3.0 Connector (X3)

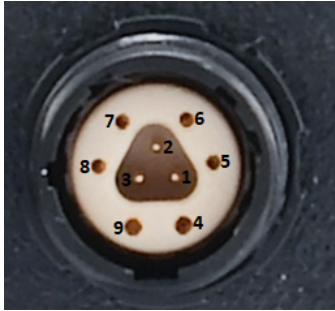	Function		Description	
	Mating Connector		MP11ZS08 2007 BK1 Z1AS	
	End Connector Type		USB 3.0 Type-A Female	
	Cable Length		50cm	
	X3-Pinout	Pin	Description	
		1*	USB 2.0 D-	
		2	SS drain	
		3*	USB 2.0 D+	
		4	Vbus 5V	
		5*	SS TX+	
6*		SS TX-		
7*		SS RX+		
8*		SS RX-		
9	Vbus GND			
Note: Pins with * mark in Pin section are differential signals.				

3.3.4 Ethernet Connector (X4,X5,X6,X7)

<p>X4 and X5</p>  <p>X6 and X7</p> 	Function		Description	
	Mating Connector		MP11ZS08 0008 BK1 Z1AS	
	End Connector Type		RJ-45 Ethernet Male	
	Cable Length		50cm	
	X4,X5,X6,X7-Pinout	Pin	Description	
		1*	DATA A+	
		2*	DATA A-	
		3*	DATA B+	
		4*	DATA B-	
		5*	DATA C+	
6*		DATA C-		
7*		DATA D+		
8*	DATA D-			
Note: Pins with * mark in Pin section are differential signals.				

3.3.5 Low-Speed Connector (X8)

	Function		Description		
		Mating Connector	UP01L18 M042C BK2 Z1ZB		
	End Connector Type	DB9 Female			
	Cable Length	50cm			
	X8-Pinout	Pin	Description	Pin	Description
		1*	RS422 CH1 A	22	RS232 CH4 GROUND
		2*	RS422 CH1 B	23	RS232 CH4 RX
		3	RS422 CH1 GROUND	24	RS232 CH4 TX
		4*	RS422 CH1 Z	25	RS232 CH3 GROUND
		5*	RS422 CH1 Y	26	RS232 CH3 TX
		6	RS422 CH2 GROUND	27	RS232 CH3 RX
		7*	RS422 CH2 A	28	GND (NO WIRE)
		8*	RS422 CH2 B	29	CAN CH1 GROUND
		9*	RS422 CH2 Z	30*	CAN CH1 LO
		10*	RS422 CH2 Y	31*	CAN CH1 HI
		11	GND (NO WIRE)	32	RS422 CH3 GROUND
		12	RS232 CH2 GROUND	33*	RS422 CH3 Y
		13	RS232 CH2 RX	34*	RS422 CH3 Z
		14	RS232 CH2 TX	35*	RS422 CH3 B
		15	GND (NO WIRE)	36*	RS422 CH3 A
		16	CAN CH2 GROUND	37	GND (NO WIRE)
		17*	CAN CH2 HI	38*	RS422 CH4 Y
		18*	CAN CH2 LO	39*	RS422 CH4 Z
		19	RS232 CH1 GROUND	40	RS422 CH4 GROUND
		20	RS232 CH1 RX	41*	RS422 CH4 B
21	RS232 CH1 TX	42*	RS422 CH4 A		
Note: Pins with * mark in Pin section are differential signals.					

4. Software Information

4.1 Installation

JetPack-5.x Installation can be found here: <https://www.forecr.io/blogs/installation/jetpack-5-x-installation-for-milboard-agx>


JetPack-6.x Installation can be found here: <https://www.forecr.io/blogs/installation/jetpack-6-x-installation-for-milboard-agx>

5. Mechanical Models & Drawings

5.1 3D Model

Full 3D models of all MILBOX-AGX can be found here: https://github.com/forecr/forecr_3d_models/tree/master/MIL-BOX-AGX

5.2 2D Mechanical Drawing

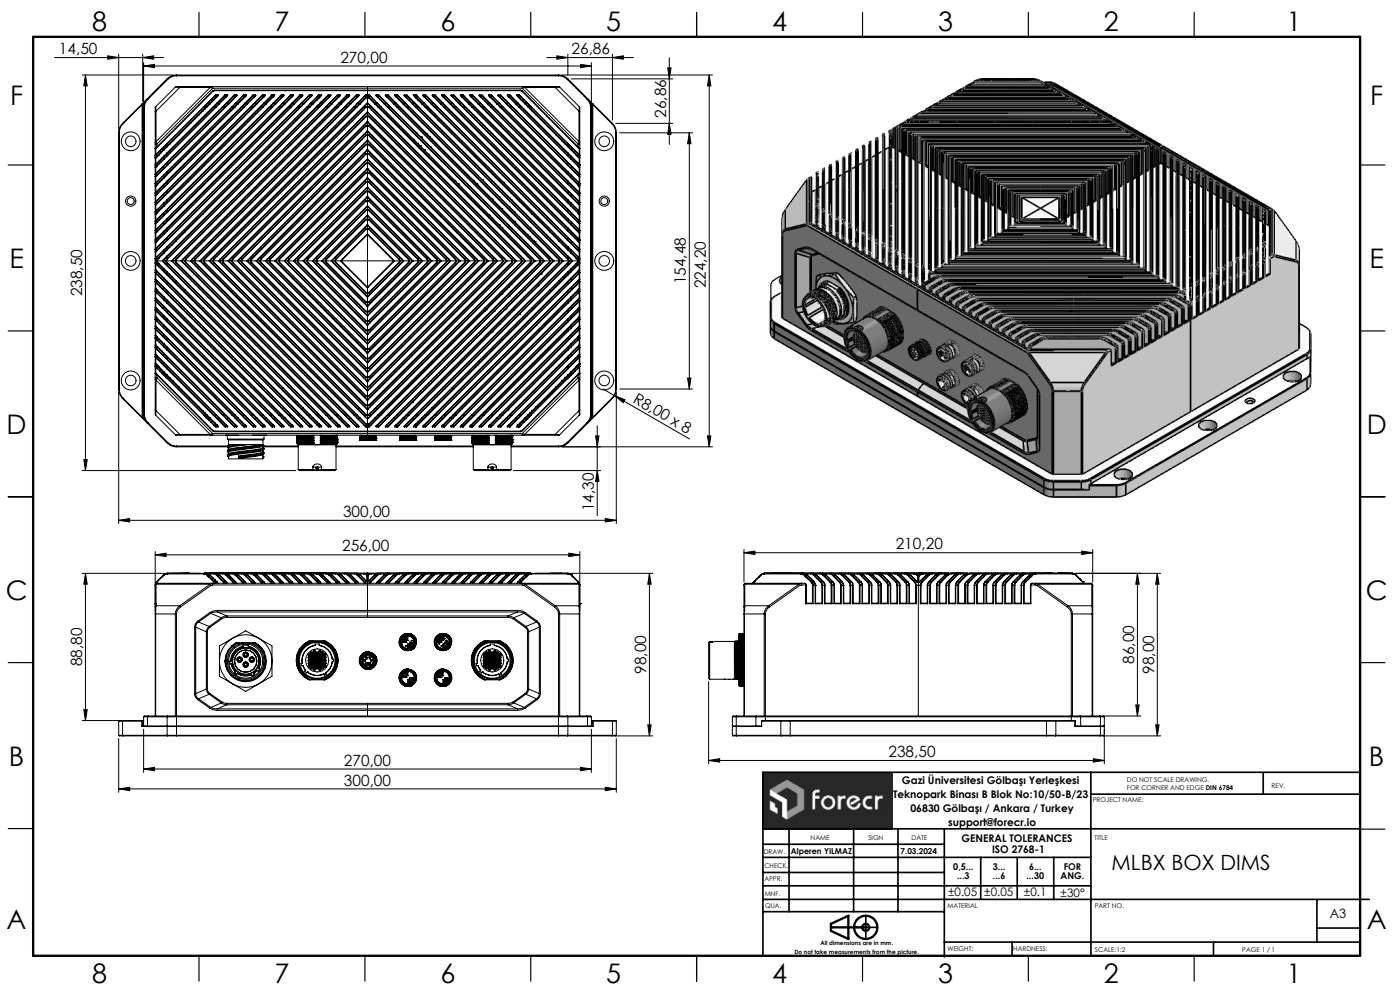

6. Power Consumption

This section will be completed soon. It will be published on our website once completed. Please check our [Forecr](#) Web Page regularly.

7. Cables

This section will be completed soon. It will be published on our website once completed. Please check our [Forecr](#) Web Page regularly.

8. MTBF Prediction

This section will be completed soon. It will be published on our website once completed. Please check our [Forecr](#) Web Page regularly.

9. Ordering Information

